BELL MODEL 206B JET RANGER II FLIGHT MANUAL SUPPLEMENT FOR

206-706-330

AUXILIARY BATTERY 13 AMP HOUR WITH BATTERY SELECT SWITCH

FAA APPROVED October 11, 1977

This supplement shall be attached to the Flight Manual, when the 206-706-330, Auxiliary Battery — 13 AMP Hour with Battery Select Switch has been installed.

The information contained herein supplements the information of the basic Flight Manual. For Limitations, Procedures, and Performance Data not contained in this supplement, consult the basic Flight Manual.



A Subsidiary of Textron Inc.

POST OFFICE BOX 482 • FORT WORTH, TEXAS 76101

11 OCTOBER 1977 REVISION 1 – 24 OCTOBER 1985 Log of Pages

BHT-206B-FMS-25

LOG OF PAGES			
PAGES 1 — 8	REVISION NO. 1	PAGES	REVISION NO.
$\begin{array}{c} 1 - 8 \dots \\ 9/10 \dots \end{array}$	1		

Log of Revisions

BHT-206B-FMS-25

LOG OF REVISIONS			
REVISION NO. DATE	REVISION NO. DATE		
Original11 Oct 77 124 Oct 85			
APPROVED APPROVED MANAGER AIRCRAFT CERTIFICATION DIVISION FEDERAL AVIATION ADMINISTRATION DEPARTMENT OF TRANSPORTATION			
SOUTHWEST REGION, FO			

INTRODUCTION

The Auxiliary Battery Kit with Battery Selection Switch No. 206-706-330, consists of a 13 amp hour battery, sensors, warning lights, select switch, battery disconnect, channel, bushing, stiffener, cables, tubes, brackets, and attaching hardware.



CENTER OF GRAVITY LIMITS

Actual weight change shall be determined after kit is installed and ballast readjusted, if necessary, to return empty weight CG within allowable limits.

LOADING LIMITATIONS

Maximum baggage loading is 220 pounds (99.8 kilograms) when Auxiliary Battery Kit is installed.

PLACARDS

REDUCE ALLOWABLE WEIGHT IN BAGGAGE COMPARTMENT BY 30 LBS WHEN AUXILIARY BATTERY IS INSTALLED

(Located on the inboard side of the baggage compartment door.)



NORMAL PROCEDURES

EXTERIOR INSPECTION

5. FUSELAGE — AFT LEFT SIDE.

Baggage compartment — Cargo tied down — AUX BATTERY secure — Door secure.

ENGINE PRE-START CHECK

After generator switch — OFF, add:

Battery select switch — BOTH.

Battery switch — ON (OFF if external power used). Observe ENGINE OUT light ON and audio signal operative.

ENGINE STARTING

After generator switch - ON, add:

CAUTION

If loadmeter is not within the normal operating range (below 70%) within two (2) minutes after start, proceed as follows:

Battery select switch — FWD position.

6 Rev. 1

ENGINE STARTING (Cont)

Loadmeter — Below 70%, continue flight on FWD battery.

If not below 70% on load meter, then

Battery select switch — AFT position.

Loadmeter — Below 70%, continue flight on AFT battery.

If not below 70% on load meter, abort mission and investigate cause.

Loadmeter — Below 70%, after two minutes.

EMERGENCY PROCEDURES

CAUTION SYSTEM

WARNING LIGHT

AUX BATTERY HOT or BATTERY HOT

FAULT AND REMEDY

Battery case temperature has reached 140°F (60.0°C) or higher. Isolate malfunctioning battery with battery select switch. Land as soon as possible. After landing, do not use affected battery for engine restart, as this will cause additional battery heating. Service or replace battery and check battery relay prior to re-use.

CAUTION SYSTEM (Cont)

WARNING LIGHT

FAULT AND REMEDY

AUX BATTERY TEMP or BATTERY TEMP

Battery case temperature has reached 130°F (54.5°C) or higher. Isolate malfunctioning battery with battery select switch. Service or replace battery prior to re-use.

NOTE

Frequent and repetitive BATTERY TEMP indications may be indicative of a marginal battery condition. It is recommended that if this occurs the battery should be removed and inspected in accordance with manufacturer's recommendation at the first convenient opportunity.



No change from basic Flight Manual.



BAGGAGE COMPARTMENT LOADING

Reduce the maximum allowable weight in the baggage compartment by 30 pounds (13.6 kilograms) when the Auxiliary Battery Kit is installed.