

SERVICE MANUAL CHANGE NOTICE

- SMCN #76-11

REFERENCE MANU	JAL NUMBER: D2500-13	DATE: 3-12-76
MANUAL TITLE:_	Super Skymaster Series (1965 thru 1973)	
A11 7amaa -		

TO: All Zolles and Dealers

FROM: CUSTOMER SERVICES DEPARTMENT

(Sheet 1 of 2) "LICENSED GROSS WEIGHT" and correct gross weights to read as follows: (Thru 337A) 4200 lbs. (337B and T337B) 4400 lbs. (337C) 4400 lbs. (T337C) Take Off 4400 lbs. (337D) 4400 lbs. (T337D) Take Off 4500 lbs. Landing 4400 lbs. (337E) Take Off 4400 lbs. (337E) Take Off 4400 lbs. (T337E and on) Take Off 4400 lbs. (T337E and on) Take Off 4400 lbs. Landing 4400 lbs. (T337E and on) Take Off 4400 lbs.	SECTION NUMBER	PAGE NUMBER	PARAGRAPH NUMBER	DESCRIPTION OF CHANGES
(337B and T337B) 4300 lbs. (337C) 4400 lbs. (T337C) Take Off 4500 lbs. Landing 4400 lbs. (T337D) Take Off 4500 lbs. Landing 4500 lbs. Landing 4400 lbs. (337E) Take Off 4440 lbs. Landing 4440 lbs. Landing 4630 lbs. (T337E and on) Take Off 4630 lbs. Landing 4400 lbs. (T337E and on) Take Off 4630 lbs. Landing 4440 lbs.	1	1-2		
(Step j)				(337B and T337B) 4300 lbs. (337C) 4400 lbs. (T337C) Take Off 4500 lbs. Landing 4400 lbs. (337D) Take Off 4500 lbs. Landing 4400 lbs. (337E) Take Off 4400 lbs. Landing 4400 lbs. (T337E and on) Take Off
10-8. If pressure is incorrect, stop engine and adjust pressure by loosening locknut and turning the slothead needle valve located just below the fuel pump inlet	10	10-39	1	"Check test gage for pressures specified in paragraph 10-8. If pressure is incorrect, stop engine and adjust pressure by loosening locknut and turning the slothead needle valve located just below the fuel pump inlet fitting clockwise (CW) to increase pressure and counter-