# CESSNA AIRCRAFT COMPANY MODEL 300 SERIES CONTINUED AIRWORTHINESS PROGRAM

# TITLE Horizontal Stabilizer Inspection

MODEL	EFFECTIVITY		
T303	T30300001 Thru T30300315	INSPECTION COMPLIANCE	
310 Thru T310R	607, 35549 Thru 310R2140		
320 Thru 320F	623, 658, 320-0001 Thru	INITIAL	10,000 HRS
	320F0045		
335	335-0001 Thru 335-0065	REPEAT	5000 HRS
<b>336</b>	633, 636, 336-0001 Thru		Thereafter
	336-0195		
337 Thru T337H-SP	337-0002 Thru 33701955		
T337G Thru P337H	P3370001 Thru P3370356		
F337E/FT337F	F3370001 Thru F33700055		
FT337GP/FT337HP	FP33700001 Thru FP33700023		
340 Thru 340A	340-0001 Thru 340A1817		

#### **PURPOSE**

To inspect for skin and rib cracks on upper and lower surface of horizontal stabilizer.

## **INSPECTION INSTRUCTIONS**

1. Inspect the upper and lower horizontal stabilizer skin area between front and rear spar at left/right horizontal stabilizer for cracks.

#### **ACCESS/LOCATION**

**DETECTABLE CRACK SIZE** 

Tailcone N/A

### **INSPECTION PROCEDURE**

Visual

## **REPAIR/MODIFICATION**

Repairs may be made in accordance with applicable Cessna Service Manual. Any repair not covered by recommendations in above documents should be coordinated with Cessna Technical Information Service prior to beginning repair.

# **COMMENTS**