

**CESSNA AIRCRAFT COMPANY
MODEL 300 SERIES
CONTINUED AIRWORTHINESS PROGRAM**

TITLE **Horizontal Stabilizer Spars and Attachments**

MODEL	EFFECTIVITY	INSPECTION COMPLIANCE	
T303 310 Thru T310R 320 Thru 320F	T30300001 Thru T30300315 607, 35549 Thru 310R2140 623, 658, 320-0001 Thru 320F0045	INITIAL	15,000 HRS
335 336	335-0001 Thru 335-0065 633, 636, 336-0001 Thru 336-0195	REPEAT	5000 HRS Thereafter
337 Thru T337H-SP T337G Thru P337H F337E/FT337F FT337GP/FT337HP 340 Thru 340A	337-0002 Thru 33701955 P3370001 Thru P3370356 F3370001 Thru F33700055 FP33700001 Thru FP33700023 340-0001 Thru 340A1817		

PURPOSE

Inspect horizontal stabilizer spars and attachments for signs of damage, fatigue and deterioration.

INSPECTION INSTRUCTIONS

1. Remove elevator from airplane and open all horizontal stabilizer access panels in accordance with appropriate Service Manual.
2. Inspect forward and aft spars and attach fittings for cracks, corrosion, loose fasteners, elongated fastener attach holes and signs of fatigue and deterioration.

ACCESS/LOCATION

Tailcone

DETECTABLE CRACK SIZE

N/A

INSPECTION PROCEDURE

Visual

REPAIR/MODIFICATION

Repairs may be made in accordance with applicable Cessna Service Manual. Any repair not covered by recommendations in above documents should be coordinated with Cessna Technical Information Service prior to beginning the repair.

COMMENTS