

**CESSNA AIRCRAFT COMPANY  
MODEL 300 SERIES  
CONTINUED AIRWORTHINESS PROGRAM**

**TITLE**                    **Vertical Stabilizer Spars and Attachments**

<b>MODEL</b>	<b>EFFECTIVITY</b>	<b>INSPECTION COMPLIANCE</b>	
T303 310 Thru T310R 320 Thru 320F	T30300001 Thru T30300315 607, 35549 Thru 310R2140 623, 658, 320-0001 Thru 320F0045	<b>INITIAL</b>	15,000 HRS
335 336	335-0001 Thru 335-0065 633, 636, 336-0001 Thru 336-0195	<b>REPEAT</b>	5000 HRS Thereafter
337 Thru T337H-SP T337G Thru P337H F337E/FT337F FT337GP/FT337HP 340 Thru 340A	337-0002 Thru 33701955 P3370001 Thru P3370356 F3370001 Thru F33700055 FP33700001 Thru FP33700023 340-0001 Thru 340A1817		

**PURPOSE**

Inspect vertical stabilizer spars and attachments for signs of damage, fatigue and deterioration.

**INSPECTION INSTRUCTIONS**

1. Remove rudder from airplane and open all vertical stabilizer access panels in accordance with appropriate Service/Maintenance Manual.
2. Inspect forward and aft spars and attach fittings for cracks, corrosion, loose fasteners, elongated fastener attach holes and signs of fatigue and deterioration.

**ACCESS/LOCATION**

Tailcone

**DETECTABLE CRACK SIZE**

N/A

**INSPECTION PROCEDURE**

Visual

**REPAIR/MODIFICATION**

If cracks or other damaged is found, contact Cessna Aircraft Company, and describe condition.

**COMMENTS**